

CARE AND MAINTENANCE

Sensor 230V Thermostatic Tap

Bridgepoint SKU: ID02511/RPT Idral code: 02511/RPT

1. CLEANING

- Clean external surfaces with water and mild soap only.
- Do not use aggressive, abrasive, acidic or solvent-based cleaners.
- Dry with a soft cloth and keep the infra-red sensor window clean.

2. ROUTINE MAINTENANCE

- Water quality strongly affects reliability. Inspect and clean filters and aerators/flow limiters when reduced flow is observed.
- After a temporary shutdown, purge the upstream supply before returning the fitting to service.
- Inspect flexible hoses, electrical leads, connections and the solenoid valve during planned maintenance.
- For battery-powered models, replace the battery when the sensor indicator signals low power; the valve is designed to fail closed.

3. RECOMMENDATIONS

- Use genuine Idral spare parts when servicing the product.
- Do not dismantle electronic or hydraulic components beyond the procedures described in the manufacturer instructions.
- If operation remains abnormal after cleaning filters, checking power and clearing the sensor area, refer the product to qualified service personnel.